

Mounting instructions


Option (BT0012):

Hands-free connection via standard cable and external loudspeaker




Important!

Always use the included fuse holders in 12V permanent and ignition lines. Supply wires must be connected only to circuits being protected by fuse with 10A max. rating in car's fuse box. Never make direct connection to car's battery!

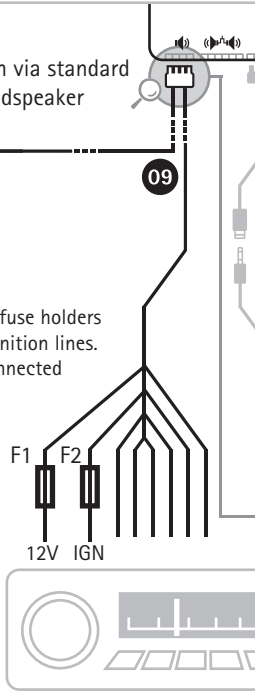

The 8-pole connector has to provide following pinning:

- 1) Ground
- 2) +12V permanent mains
- 3) Loudspeaker input + (from radio)
- 4) Loudspeaker output +
- 5) +12V ignition (advice ignition)
- 6) Radio mute
- 7) Loudspeaker output -
- 8) Loudspeaker input -

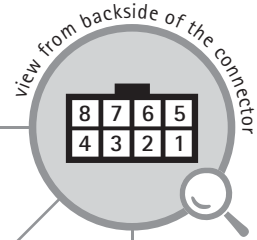

Pin Assignment of Power Connector:


- F1: +12V permanent supply 5A
- F2: Ignition (IGN) 3A

Always use fast acting fuses of same current rating when replacing fuses!

(Fast Acting, 32V DC, Interrupting Rating 1000A@32V DC, Temp. -40..+105°C)


Option (BT0011):

Hands-free connection via both front loudspeakers

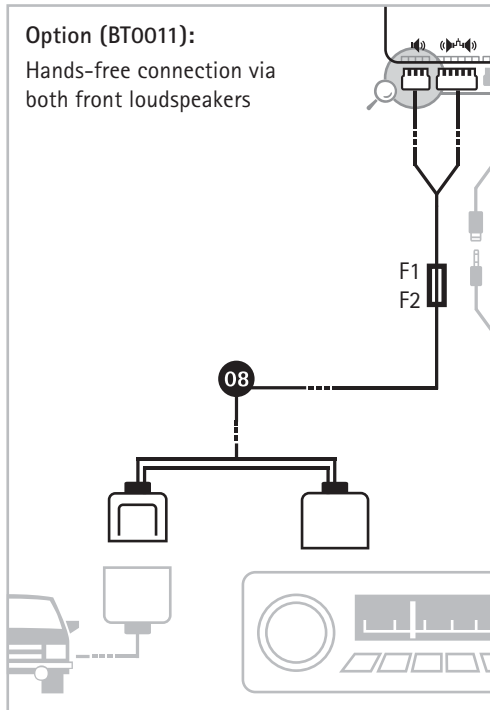

Option (BT0010):

Hands-free connection via one front loudspeaker

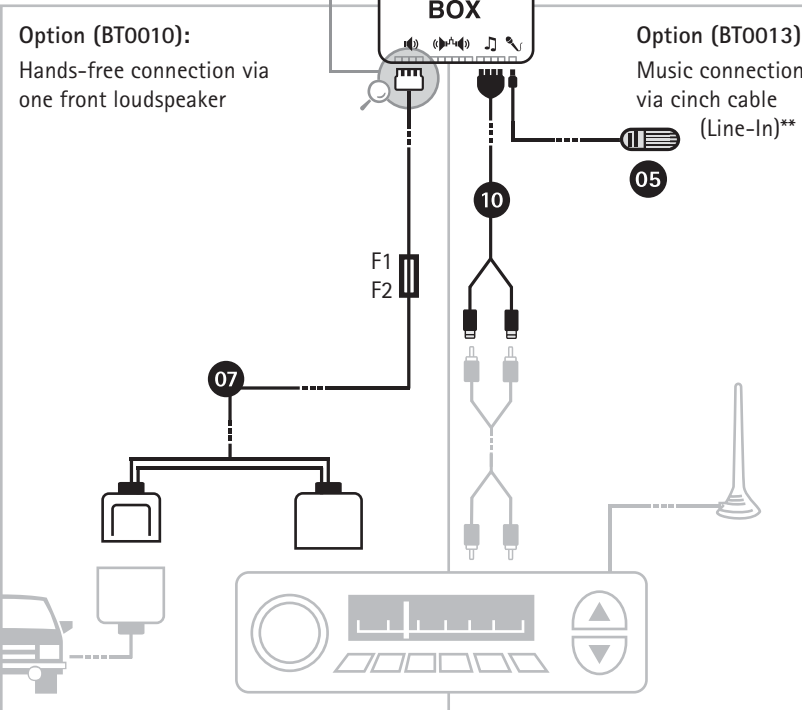



Option (BT0013):

Music connection via cinch cable (Line-In)**



Option (BT0014):

Music connection FM-modulation

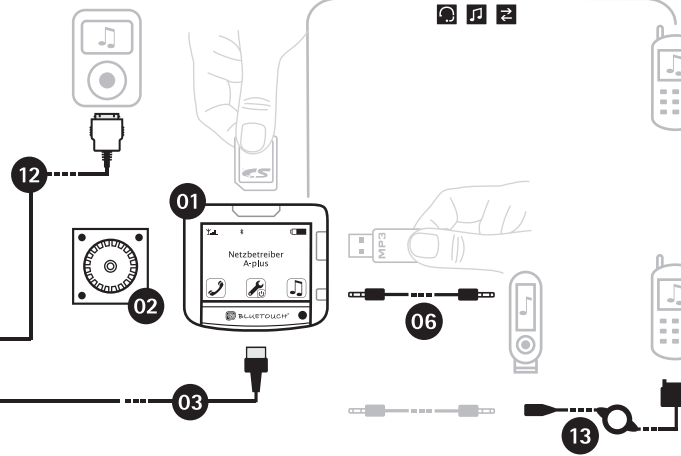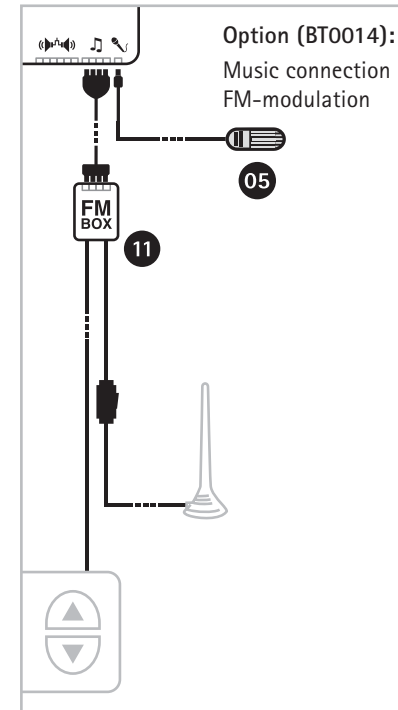

Basic components

- 01 Touch screen
- 02 Mounting angle
- 03 Display cable
- 04 Electronic box (CIB-Box)
- 05 Microphone
- 06 Stereo-audio plug (3.5mm)

Power supply / Hands-free connection

- 07 ISO - cable
- 08 ISOplus - cable
- 09 Standard cable (open lacing)*

Music connection

- 10 Cinch cable (Line-In / AUX / CD-changer)**
- 11 FM-Modulator (via antenna)

Accessories

- 12 iPod® - cable
- 13 Mobile phone specific adapter cable

*If the radio does not have a Tel-In input you have to order an external loud-speaker.

**According to the radio type an extension cinch cable is needed for the standard cinch cable as well as a radio adapter.

These cables are available at any good stored assembly garage or specialist dealer.

(advice ignition)

Some vehicles do not come with an IGN connection. This line is not necessary for operation of BLUETOUCH®. In this case, BLUETOUCH® doesn't start automatically. Just touch the display for 1 second.